

User Manual

(Manual Pengguna)

S/S Gas Pasta Broiler



GPB6BFS-17

Thank you for purchasing BERJAYA product. Please read this service manual carefully before operating the product. Please keep this manual in a safe place for future reference.

Contents :-

 
- Installation	2
- Site Preparation	2
- Gas Connection	2
- Leakage Test	3
- Technical Specifications	3
- Operation	3
- Warning	3
- Cleaning	4
- Memo	4

INSTALLATION

- Installation and maintenance of this equipment must be performed by qualified personnel.
- The use of this equipment must conform regulations set by local authorities.
- Do not use any other gas that is not fit for this boiler, not to use the medium and high pressure adjustable valve. Only low pressure adjustable valve can be used in this boiler.


SITE PREPARATION

- This equipment must be installed in a flat and firm surface.
- User can install an exhaust gas to expel exhaust gas out of the room.
- Ensure that the top, left and right side of this equipment is at least 10 cm from the wall.

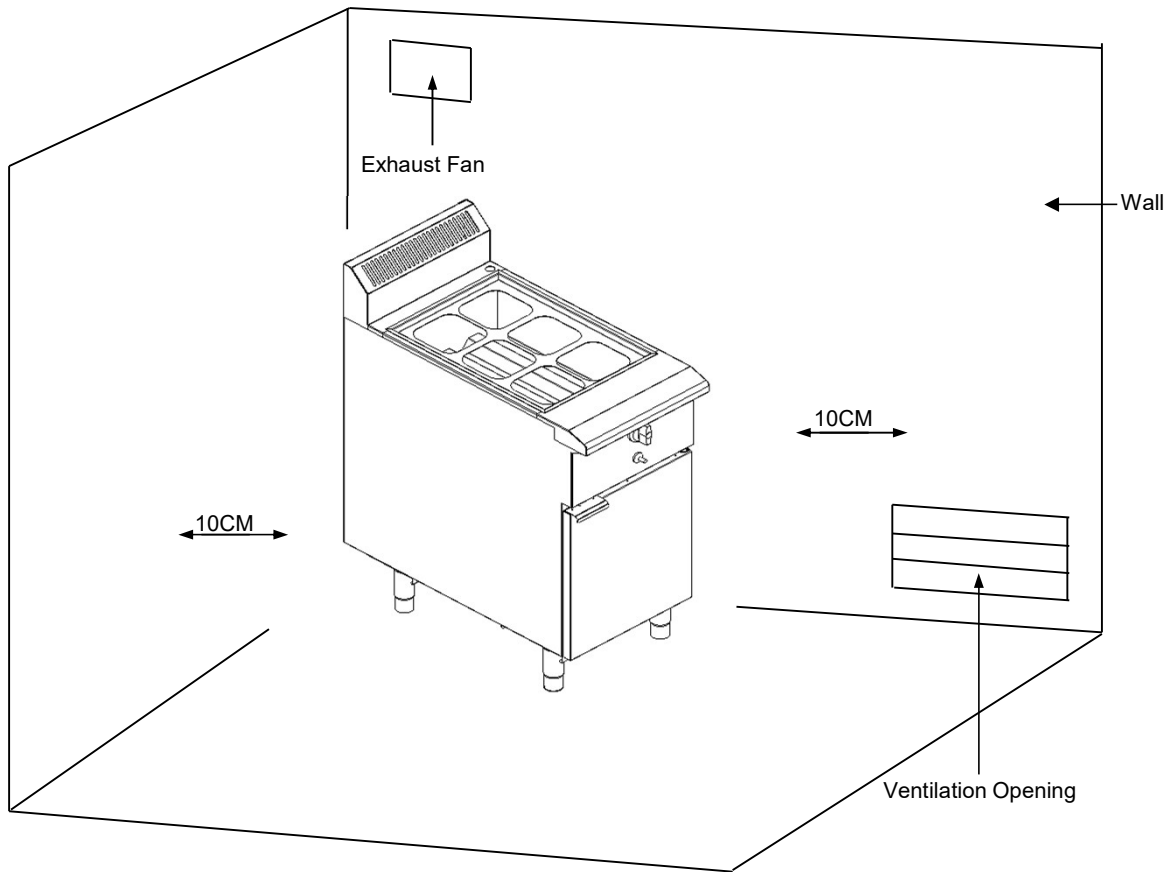


GAS CONNECTOR

LPG Connector

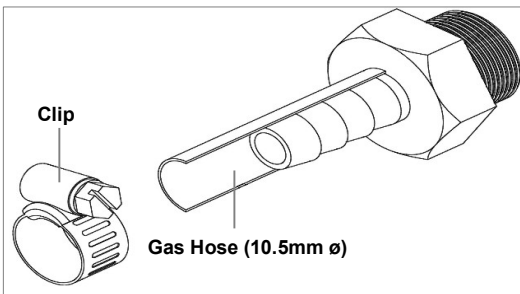

NG Connector

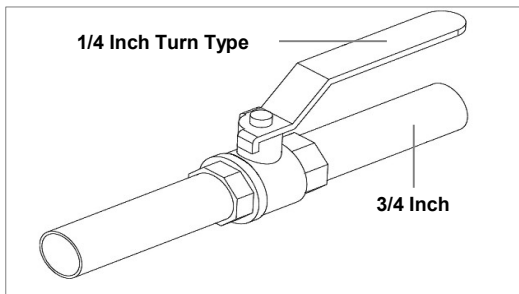

- The appliance must be disconnected from the gas supply piping system during any pressure testing.
- A separate gas supply shut off valve must be installed up-stream of the regulator in an accessible location.
- The gas service supply line must never be smaller than the appliance inlet line.

LEAKAGE TEST

- Do not use naked flame for leakage test.
- Leakage test should be performed using soap solution.

TECHNICAL SPECIFICATIONS

Model	Gas Type	Power Gas	Gas Pressure	Air Flow Capacity
GPB6BFS-17	LPG	29Mj	2800pa	0.2 m³/h

OPERATION

Ignition

- Left rotating the switch to position "♣", and then press it to the bottom and continue to press the switch (about 5 times). You can know whether the kindling is ignition through the watching window. You must continue to press the switch for five seconds to make sure the kindling is ignition. If it is crush out after you release it, please repeat the above process. When the furnace have not used for a long time or used for the first time, there will be much air in the pipe, so you must rotate the switch to "♣" and press it to the bottom about two or three minutes to release the air, and then follow the above process.


Heating

- Rotate the switch to the position of the biggest flame "▲". There are two positions "▲" is biggest flame, "▼" is the smallest flame. You can adjustment it by your condition.

Shutting Off

- Shut off the main heating element only. Rotate the switch to "♣" position, the main heating element is shut off, but the kindling is also combustion. Shut off completely, rotate the switch from "♣" to "●" position, the kindling will be extinguished.

Attention : - Make sure to switch off the gas valve when not using.

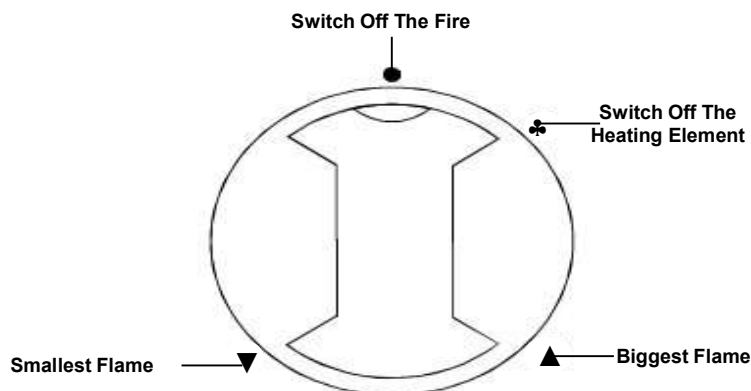

WARNING

- Do not use high pressure LPG or NG.
- Keep a safe distance of your body and eyes from the boiler when the door is opened.
- Install an exhaust fan on top of the oven. Ensure free flow of air around the boiler.
- Exhaust vent should be examined from time to time to ensure there is no blockage. The exhaust vent must be kept opened when the boiler is in operation.

CLEANING

- Remove electric supply plug from socket during cleaning.
- Do not direct water jet onto the boiler.
- Clean the burning element of boiler and the panel frequently.

MEMO

Please fill in the following at the purchasing time for future service reference.

Model Number :	
Purchasing Date :	
Dealer's Name :	
Address :	
Contact Number :	Home : Handphone :
Comment :	

The manufacturer reserves the right to change in design, equipment and technical features at any time. Accordingly, no claims based on data, illustration or descriptions in this operation manual will be admitted. English version is to be referred for any ambiguity.

This operation manual is for usage guideline. The technical data details and usage instructions are given with our best knowledge of product and with good faith. It should not bind the sales agent or manufacturer to attendance in court or to appear in any enquiry before any government or statutory bodies.